

TECHLIFE

Unlock devices – Techlife X5, X6, X7, X7S, X9

1. How to enable the change of settings? Just on the attached scooter display hold two buttons at the same time. POWER (red) and MODE.
2. How to change programs in the settings? Press the POWER button (red), the display will switch from P01 to P20.
3. How to edit a given program? Press MODE to the point of interest values.

How to unlock electric scooter

1. Switch the settings program to P08
2. Change the program setting P08 to 100.